

1. REMOVE THE EXISTING INSTRUMENT MODULE AND HEADER FROM THE ERT COLUMN, ENSURING THE CONNECTORS ARE DETACHED.

SPECIALIST KEY REQUIRED TO REMOVE THE INSTRUMENT MODULE.

2. FIT THE HEADER UNIT TO THE TOP SECTION OF THE HOUSING BY SECURING THE M10 FLANGE NUTS.

3. MOUNT THE ANTENNA TO THE INSIDE OF THE HOUSING AS SHOWN, USING THE EXISTING FASTENERS FROM THE TOP.




- A. LOOSEN THE SCREW AT LEFT-HAND SIDE AT THE REAR, CENTRE OF HOUSING.

13MM SOCKET AND PHILLIPS HEAD SCREW DRIVER REQUIRED.

- B. HOLD THE BRACKET AT 90° TO THE CLOSED DOOR AND PASS IT THROUGH THE TOP-LEFT HOLE. LOWER THE BRACKET THROUGH THE FIRST BEND, ENSURING THE CABLE PASSES THROUGH THE SAME HOLE OF THE HOUSING.
- C. ROTATE THE BRACKET 90° SO THE ANTENNA IS CENTRED IN THE HOUSING. LOWER IT UNTIL THE SLOT FITS OVER THE LOOSENED SCREW, THEN PUSH THE BRACKET UPWARDS TO SECURE IT AND TIGHTEN THE SCREW.

4. MOUNT THE TOP SECTION COLUMN OF THE ERT HOUSING IN PLACE BY SECURING THE M10 FLANGE NUTS.

5. CONNECT THE ANTENNA CABLE TO THE BACK OF THE NEW INSTRUMENT MODULE.

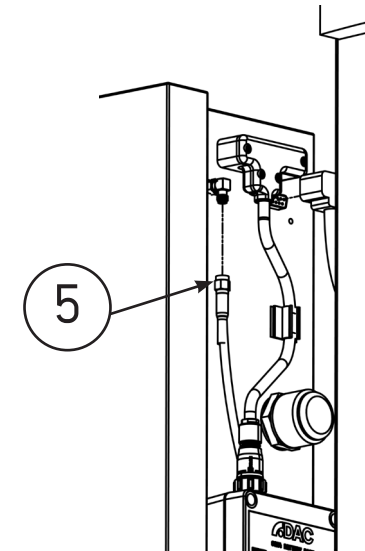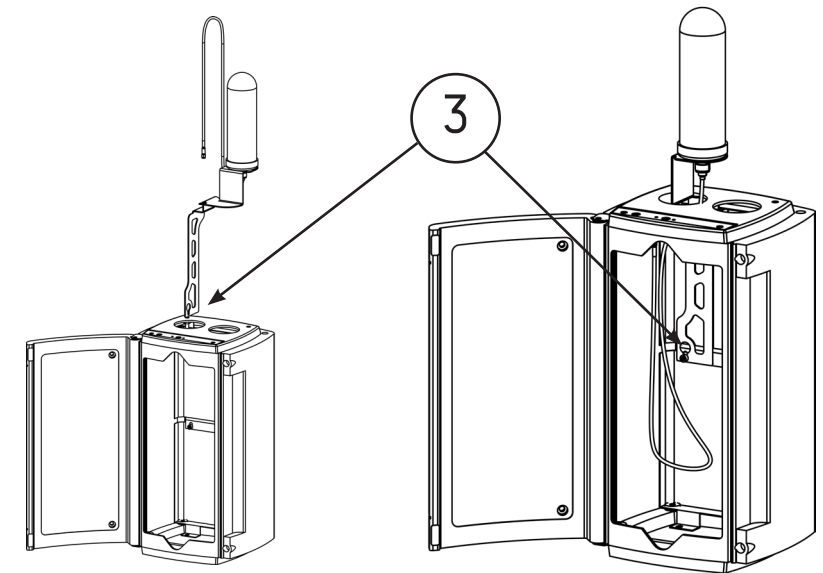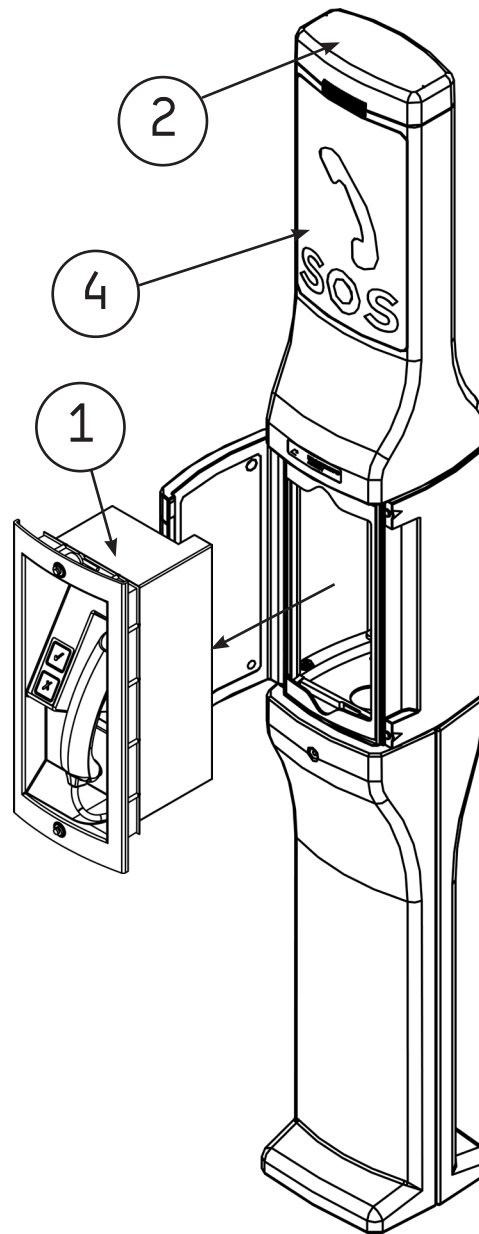

6. CONNECT THE BULGIN CONNECTOR TO THE TOP OF THE BATTERY ENCLOSURE, ENSURING THE 25-WAY D-TYPE IS FITTED.
7. CONNECT THE 9-WAY D-SUB TO THE CONNECTOR PLATE.
8. REINSTALL THE INSTRUMENT MODULE IN THE HOUSING. SPECIALIST KEY REQUIRED TO INSTALL THE COLUMN COVER.
9. CHECK THE 2 STATUS LEDs, IF BOTH ARE FLASHING BLUE, THE WIFI IS ACTIVATED.

LED INDICATOR DETAILS		
LED COLOURS		PURPOSE
LEFT	RIGHT	
FLASHING RED	FLASHING BLUE	POWER UP
FLASHING BLUE	FLASHING BLUE	REGISTERED ON NETWORK AND WIFI ACTIVE
SOLID RED	FLASHING BLUE	BOOTED, BUT EITHER NO SIM OR NOT REGISTERED ON THE NETWORK
SOLID GREEN	OFF	OFF HOOK, GSM CALL
SOLID PURPLE	OFF	OFF HOOK, LTE CALL
SINGLE GREEN FLASH	OFF	RECEIVED AN SMS

10. IF NOT CONFIGURED PRIOR TO INSTALLATION, PROGRAM THE UNIT FOLLOWING THE STEPS FROM THE USER GUIDE.
11. PICKUP THE HANDSET TO VERIFY THE ERT UNIT IS WORKING CORRECTLY.

